

SAILTECK INSTALLATION GUIDE

SAILTECK®
Sail to win

ORIENTATION AND STORAGE

Install vertically, orientation not to exceed 45° from vertical. To avoid damage and prevent the unit from turning on with stray light sources, always store in the soft pack.



Unique zip-less soft pack which does not corrode with salt water

BULKHEAD MOUNTING

Use the four self-tapping screws provided. For retro-fit, it may be convenient to drill out the upper 80x40mm hole set in the Race Cradle.



MAST MOUNTING USING A SLUG IN THE TRACK

Fit the center bolt supplied and drop the slug into the mast track. Tighten the center bolt, but do not over-tighten. Drill out the two M4 center holes in the Race Cradle. Offer up the Race Cradle then fit and tighten the two countersunk bolts supplied.



MAST MOUNTING SPACED OFF MAST

The Sailteck Mast Bracket (available separately from your reseller) provides room for ropes or pulleys to run between the mast and the Sailteck. It can be fixed using a strap, slug, or bungee.



DECK MOUNTING

A deck mount (available separately from your reseller) is recommended. Drill the 40 x 80mm Race Cradle hole set if required; the lower set is usually best for deck mounting.



LANYARD

For exposed installations a safety lanyard can be attached for security. Remove the bezel by turning the product over and unclipping from the side. **With the bezel removed**, fit a fine 'kite-string' lanyard <math>< 1\text{mm}</math> or drill the holes if using a larger diameter (lanyard not supplied). Replace the bezel.

